




THUNDERFORM®

SFRS13FB10 Installation Guide

Scion FRS 2013 - UP

(Unloaded/Loaded/Amplified)

STEP 1:

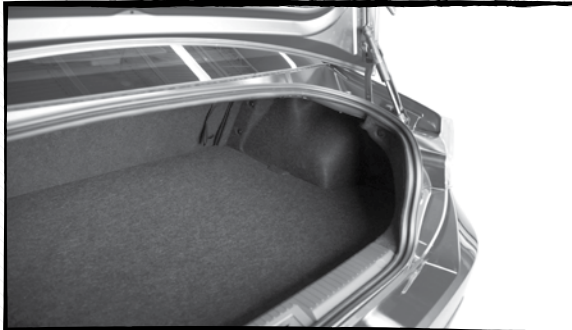

Clear out the cargo area of your vehicle.

STEP 2A:




Attach the flat bracket to the rivnut on the backside of the enclosure using the supplied 1/4-20 bolt.

STEP 3:




Place enclosure into vehicle. Before moving on to the next step make all wire connections, speaker connections to the amplifier for unloaded/loaded and power kit and input connections for amplified. (See diagrams on next page).

STEP 2:

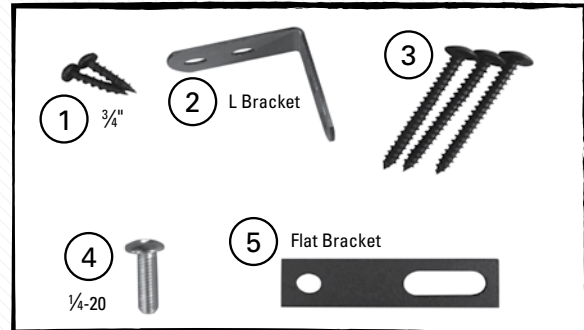

1. Short screws secure "L" bracket to enclosure
2. "L" bracket secures enclosure to vehicle
3. Long screws secure "L" bracket to vehicle
4. Bolt secures flat bracket to rivnut
5. Flat bracket bolts to rivnut on backside of enclosure

STEP 2B:

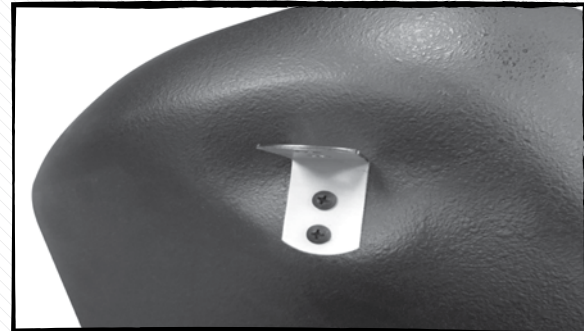

Attach the "L" bracket using the supplied 3/4" screws.
Note: The holes are not pre-drilled.

STEP 4A:



Push the enclosure in place and using supplied hardware secure enclosure in place. (**Note:** The brackets may need to be bent slightly to conform to the vehicle.)

SFRS13FB10 Installation Guide

Scion FRS 2013 - UP
(Unloaded/Loaded/Amplified)

STEP 4B:




Once top bracket has been secured, use supplied screws to secure side bracket to the vehicle.

STEP 5:




The installation is now complete. Test enclosure using preferred source and enjoy.

Speaker Level Wiring

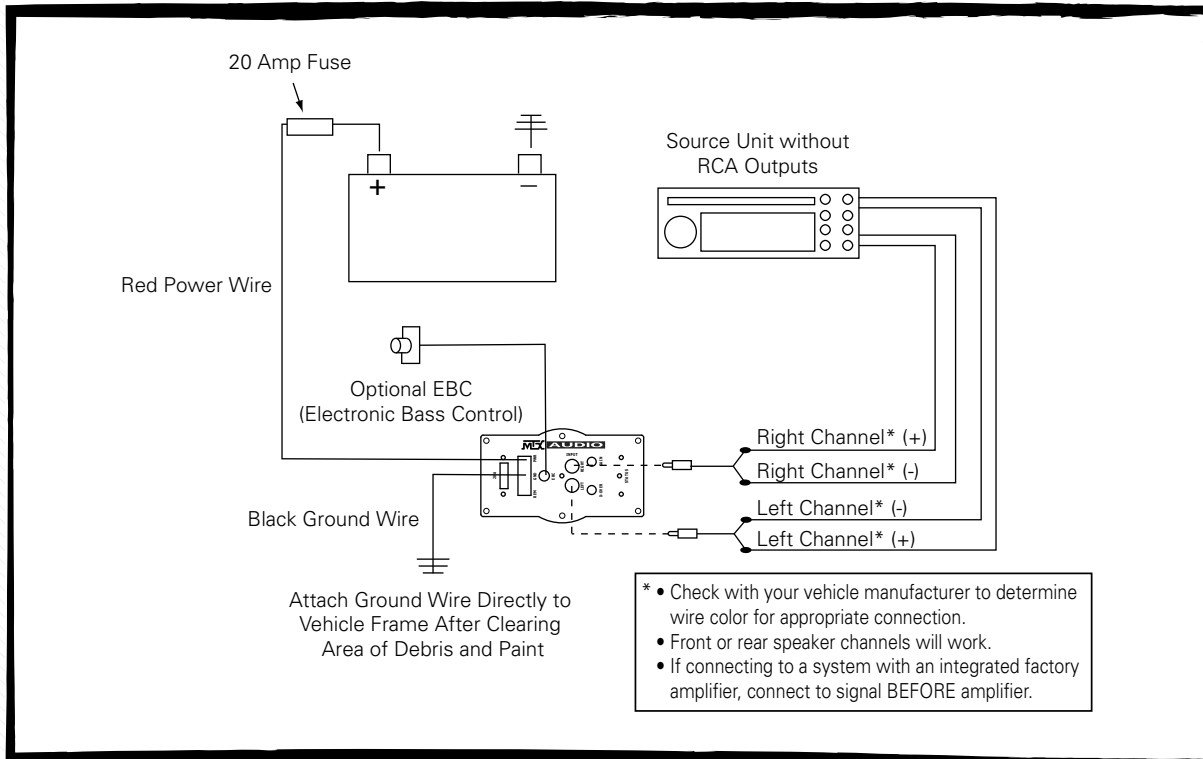

RCA Interconnect Wiring

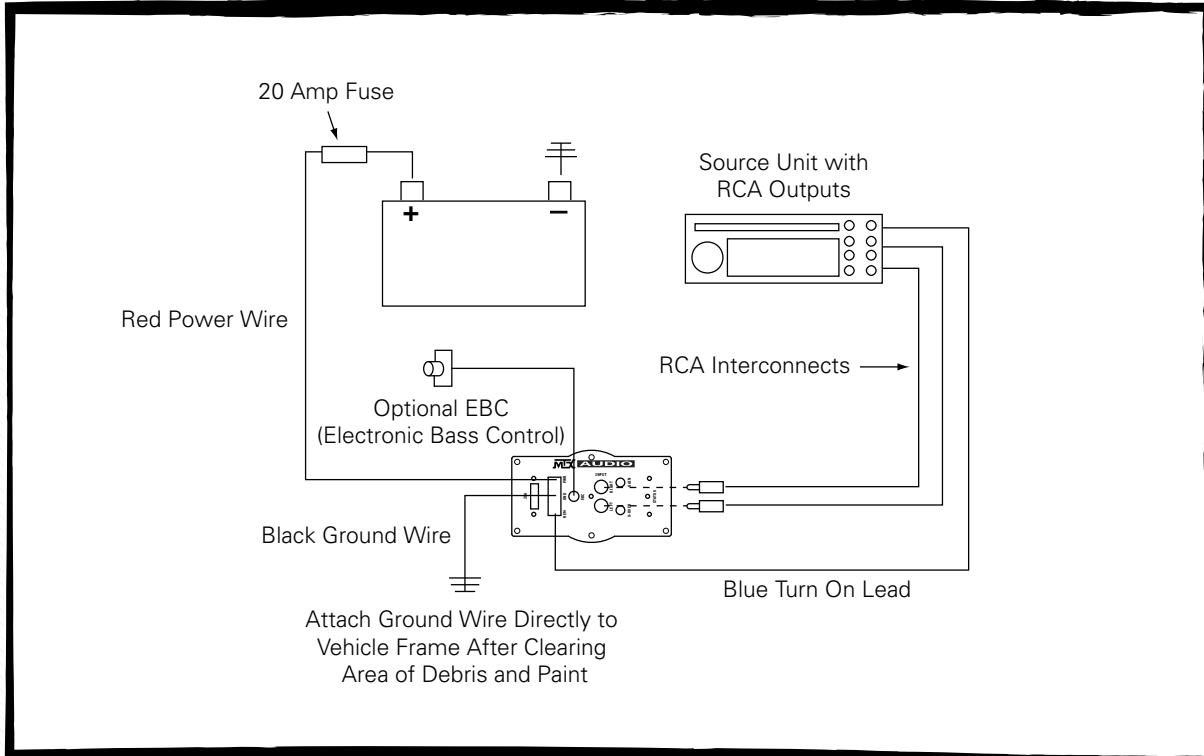

Take Your Vehicle to the Next Level and
Really Feel the Thunder[®] by Upgrading Your Full Range Speakers.




THUNDER61

Description: 6.5" Component
Power: 90 Watts RMS
Impedance: 4Ω
Freq Response: 44Hz – 20kHz
Adapter Required

THUNDER65

Description: 6.5" Coaxial
Power: 60 Watts RMS
Impedance: 4Ω
Freq Response: 48Hz – 20kHz
Adapter Required

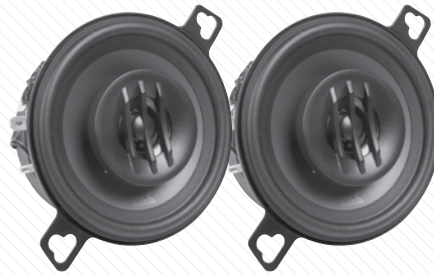

THUNDER35

Description: 3.5" Component
Power: 25 Watts RMS
Impedance: 4Ω
Freq Response: 83Hz – 20kHz

WARRANTY:

Amplified and Loaded ThunderForm Enclosures purchased in the USA from an authorized MTX dealer are guaranteed against defects in material and workmanship for a period of five (5) years, two (2) years full replacement plus three (3) years prorated. Unloaded ThunderForm Enclosures purchased in the USA from an authorized MTX dealer are guaranteed against defects in material and workmanship for a period of 30 days. The warranty period begins the day the product is purchased by the end user and is limited to the original retail purchaser.

Product found to be defective during that period will be repaired or replaced by MTX at no charge. This warranty is void if it is determined that unauthorized parties have attempted repairs or alterations of any nature. Warranty does not extend to cosmetics or finish. Before presuming a defect is present in the product, be certain that all related equipment and wiring is functioning properly. MTX disclaims any liability for other incurred damages resulting from product defects. Any expenses in the removal or re-installation of products are not covered by this warranty. MTX's total liability will not exceed the purchase price of the product. If a defect is present, your authorized MTX dealer may be able to effect repairs.

Proof of purchase is required when requesting service, so please retain your sales receipt, and take a moment to register your product online at mtx.com. Also, a Return Authorization number (RA) is required before shipping product back to MTX. Call 800-556-2888 or 608-328-5560 for speaker RAs.