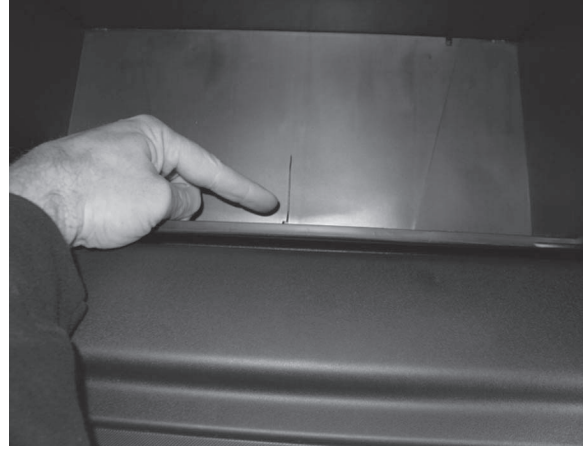


TTCC05FB10

Toyota Tacoma (Loaded / Amplified)

Step 1

Fold driver side rear seat back forward to expose storage pocket. Remove anything in the pocket area.

Step 2

In the bottom of the pocket area, there is a small plastic rib that needs to be removed with a utility knife.

Step 3

Using the supplied hardware, attach the supplied bracket to the enclosure as shown.

Step 4

Place enclosure into pocket as shown. The enclosure will fit snug into the pocket and may take some force to get it all the way into the pocket. Using the remaining hardware, attach the bracket to the vehicle. (Note the bracket may need to be bent slightly to conform to the vehicle.)

Make final speaker connections, return seats to their locked positions. Your Installation is complete. Enjoy your newly found bass!

Warranty

Thunderform Loaded Enclosures purchased in the USA from an authorized MTX dealer are guaranteed against defects in material and workmanship for a period of 2 years, the warranty period begins the day the product is purchased by the end user. This warranty is limited to the original retail purchaser of product.

Amplified Thunderform Enclosures purchased in the USA from an authorized MTX dealer are guaranteed against defects in material and workmanship for a period of 1 year, the warranty period begins the day the product is purchased by the end user. This warranty is limited to the original retail purchaser of product.

Product found to be defective during that period will be repaired or replaced by MTX at no charge. This warranty is void if it is determined that unauthorized parties have attempted repairs or alterations of any nature. Warranty does not extend to cosmetics or finish. Before presuming a defect is present in the product, be certain that all related equipment and wiring is functioning properly. MTX disclaims any liability for other incurred damages resulting from product defects. Any expense in the removal or reinstallation of products are not covered by this warranty. MTX's total liability will not exceed the purchase price of the product. If a defect is present, your authorized MTX dealer may be able to effect repairs.

Proof of purchase is required when requesting service, so please retain your sales receipt, and take a moment to register your product on line at MTX.com. Also, a Return Authorization number (RA) is required before shipping product back to MTX, call 800-556-2888 or 608-328-5560 for speaker RA's.

BASS SLAMMER™

TTCC05FB10

Toyota Tacoma (Unloaded)


Enclosure Volume: .59 Cubic Foot, Sealed

Step 1



Connect wires (black neg. And red pos.). Pre-drill woofer holes using 1/8" drill bit before screwing down. Using supplied hardware, secure woofer into enclosure, making sure not to overtighten screws to avoid stripping. Fold driver side rear seat back forward to expose storage pocket. Remove anything in the pocket area.

Step 2

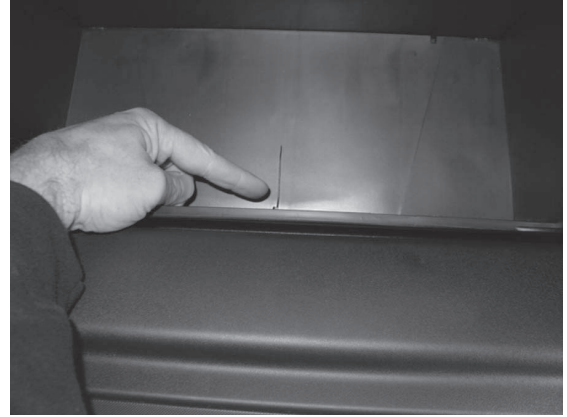

In the bottom of the pocket area, there is a small plastic rib that needs to be removed with a utility knife.

Step 3



Using the supplied hardware, attach the supplied bracket to the enclosure as shown.

Step 4



Place enclosure into pocket as shown. The enclosure will fit snug into the pocket and may take some force to get it all the way into the pocket. Using the remaining hardware, attach the bracket to the vehicle. (Note the bracket may need to be bent slightly to conform to the vehicle.)

Make final speaker connections, return seats to their locked positions. Your Installation is complete. Enjoy your newly found bass!