

CTYSD07FB10 Chevy Tahoe / Yukon / Suburban / Denali (Loaded / Amplified)**Step 1**

Open second row cup holder and locate the (5) screws.

Step 2

Remove the (5) screws and cup holder and set to the side for re-assembly.

Step 3


Pull gently on the second row audio and climate control panel to unclip it, unplug wires and set to the side for reassembly.

Step 4


Remove the (2) screws, remove rear trim panel and pop out wire retainers.

Step 5

Open storage area.

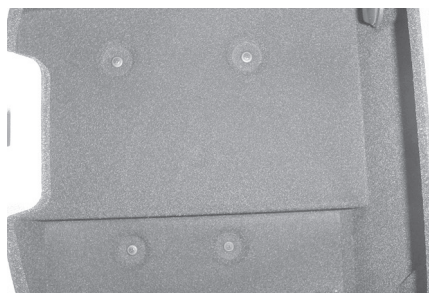Step 6

Remove the (4) screws in bottom of storage area and set to the side for re-assembly.

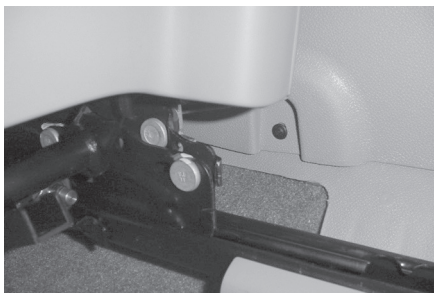
Step 7

Move front seats all the way forward. From the second row seating area, locate the screws by the floor on the side of the counsel. There are screws on both sides of the counsel. Remove screws and set to the side for re-assembly.

Step 8

Move seats all the way back, from the front seat area, locate the screws by the floor on both sides of the counsel. Remove and set to the side for re-assembly.

Step 9

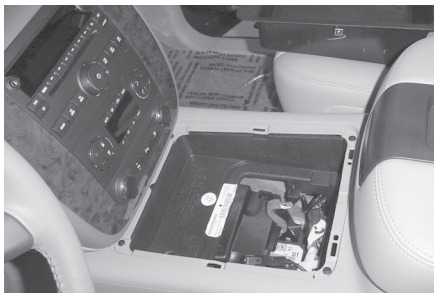


Remove cup holder and tray by pulling up on the tray. Pop out wire retainers.

Step 10




Slide counsel to the back and tip upward to expose wires and area under counsel.

Step 11

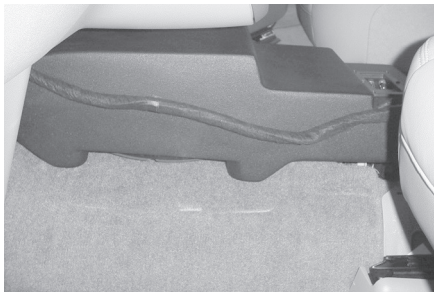

Place enclosure onto hump area under counsel as shown in photo.

Step 12

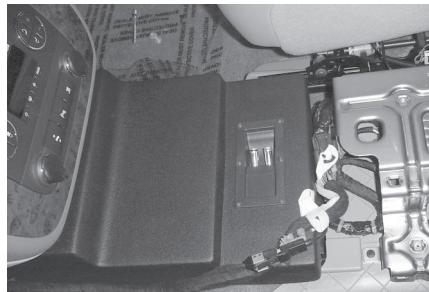


This shows how the enclosure should look.

Step 13



From the passenger side, locate the stud towards the front of vehicle and attach one of the supplied brackets with supplied hardware. Attach bracket to enclosure with screws so it will still go over factory stud.

Step 14

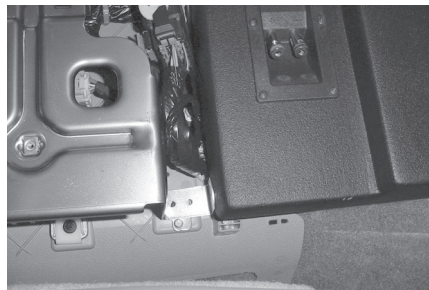

Using remaining bracket and hardware, attach to enclosure as shown. Remove screw from floor and fasten enclosure to floor with this screw. Make final speaker connections.

Step 15



Re-assemble counsel in reverse process, reusing all factory fasteners and enjoy, your installation is now complete.

Warranty

Thunderform Loaded Enclosures purchased in the USA from an authorized MTX dealer are guaranteed against defects in material and workmanship for a period of 2 years, the warranty period begins the day the product is purchased by the end user. This warranty is limited to the original retail purchaser of product.

Amplified Thunderform Enclosures purchased in the USA from an authorized MTX dealer are guaranteed against defects in material and workmanship for a period of 1 year, the warranty period begins the day the product is purchased by the end user. This warranty is limited to the original retail purchaser of product.

Product found to be defective during that period will be repaired or replaced by MTX at no charge. This warranty is void if it is determined that unauthorized parties have attempted repairs or alterations of any nature. Warranty does not extend to cosmetics or finish. Before presuming a defect is present in the product, be certain that all related equipment and wiring is functioning properly. MTX disclaims any liability for other incurred damages resulting from product defects. Any expense in the removal or reinstallation or products are not covered by this warranty. MTX's total liability will not exceed the purchase price of the product. If a defect is present, your authorized MTX dealer may be able to effect repairs.

Proof of purchase is required when requesting service, so please retain your sales receipt, and take a moment to register your product on line at MTX.com. Also, a Return Authorization number (RA) is required before shipping product back to MTX, call 800-556-2888 or 608-328-5560 for speaker RA's.