



THUNDERFORM®

FESCP08FB10 Installation Guide

Ford Escape 2008 - 2012
(Unloaded/Loaded/Amplified)

STEP 1:



Clean out your vehicle, so you have a clear space to work.

NOTE!!

Note: Before drilling, make sure that you are not going to be drilling into any gas lines, brake lines, transmission lines, electrical wiring, transfer case (4X4 vehicles) or anything else that might cause a reduction in your weekly pay. Always wear eye protection when drilling.

STEP 2:




Remove the woofer from the enclosure. Set enclosure in place as shown. Using the hole in the back of the enclosure as a guide, place a mark on the interior panel behind the enclosure. This will be used to mount the enclosure. Drill a hole in the interior panel where marked as shown.

STEP 3:



Remove plastic trim panel as shown.

STEP 4:

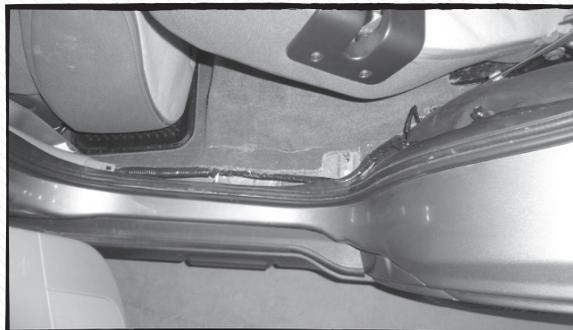

Remove bottom plastic trim piece from rear left door opening.

STEP 5:



Remove side panel as shown.



THUNDERFORM[®]

FESCP08FB10 Installation Guide

Ford Escape 2008 - 2012
(Unloaded/Loaded/Amplified)

STEP 6:



With the interior panel removed, note the location of the hole you just drilled. Place the bolt from the mounting hardware into the hole from the back side. Install a flat washer, lock washer, a nut, and tighten. This will form a stud for the enclosure to mount to.

STEP 8:




With the panel back in place, re-install the side and back door trim pieces. Once that is complete, slide the enclosure into place onto the stud. Using material from the hardware pack, place a fender washer, lock washer, and nut onto stud and tighten. (Make sure wires are ran in the channel behind the enclosure before tightening it into place.)

STEP 7:



Re-install the interior panel, making sure the bolt sticks out through the hole drilled into the panel. (While the panel is removed, this would be a good time to run any wires needed for your speaker to the area where the enclosure will be mounted. Be sure to leave a little extra for adjustment!)

STEP 9:

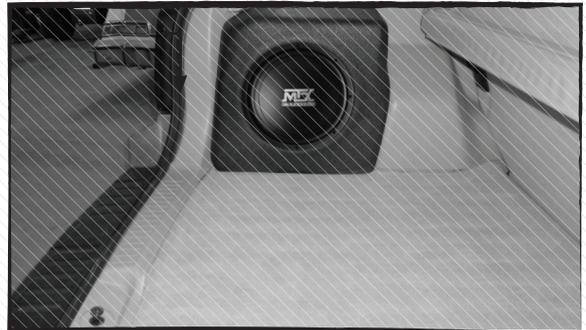

Re-install the woofer, and make any final wire connections and adjustments.

Enjoy your new found bass!